

Pairing LINK

The spare parts will be sold with a different code from the original, so the spare part must be paired with the original remote/receiver.

Pairing process

1. Disconnect power from the receiver and remove the screws with a 2.5 HEX wrench of the receiver.



- Power the receiver. After supplying voltage, for safety reasons, you have 1 minute to pair; this function is disabled afterwards.
- □ 3. Press the black button on the receiver.
 - 4. When you lift your finger, the blue LED will start flashing.
- 5. Wait for the blue LED to turn off.
 - 6. Press the black button on the receiver again.
 - 7. When you lift your finger the white LED will start flashing.
 - 8. Press STOP button on the remote control 3 times.
 - 9. Wait for the white LED to turn off and the link will be finished.

Attention: the pairing process must be carried out when there are no other remotes operating nearby, otherwise it could link the nearby remotes instead. It is necessary to guarantee that the batteries are new.